

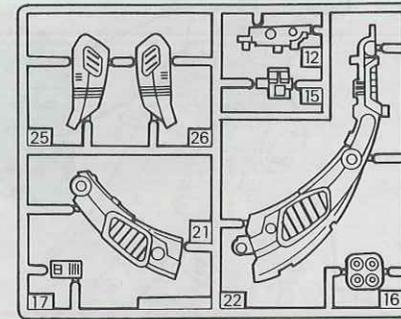
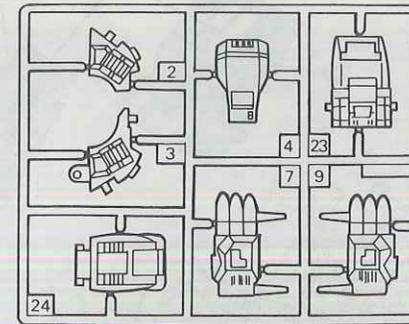
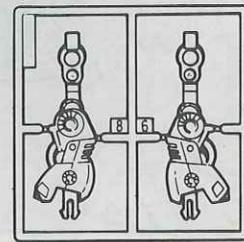
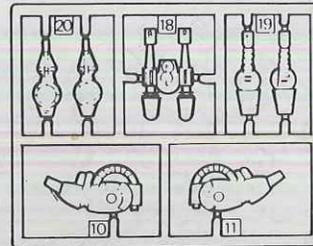
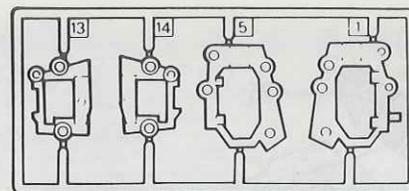


BEFORE YOU BEGIN. Do not cut parts off frame before studying each picture thoroughly. Before cutting, match each part number (located on small tabs on the frame) with the corresponding number in each assembly diagram. Now starting with step 1, use your safety scissors to cut the parts off the frame as needed. Remove excess plastic where part was cut from frame. Continue to put your Zoid together part by part. They snap together and do not require glue. When you're done just wind him up and watch the action.


AVANT DE COMMENCER. Ne pas découper les pièces avant d'avoir bien étudié chaque illustration. Avant de découper, identifier chaque numéro de pièce (situé sur le cadre) avec le numéro correspondant de chaque schéma. Tout d'abord, avec des ciseaux à bouts ronds, découper au fur et à mesure les pièces du cadre. Enlever l'excès de plastique là où la pièce a été coupée du cadre. Assembler le Zoid pièce par pièce. Elles s'emboîtent, pas besoin de colle. Lorsque le Zoid est assemblé, le remonter et regarder l'action commencer.

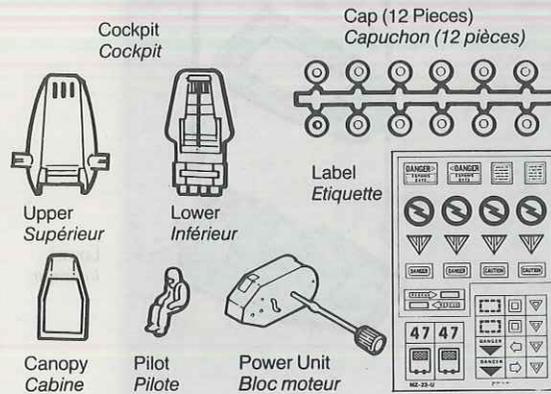


1 Assembly of neck and tail
Montage du cou et de la queue

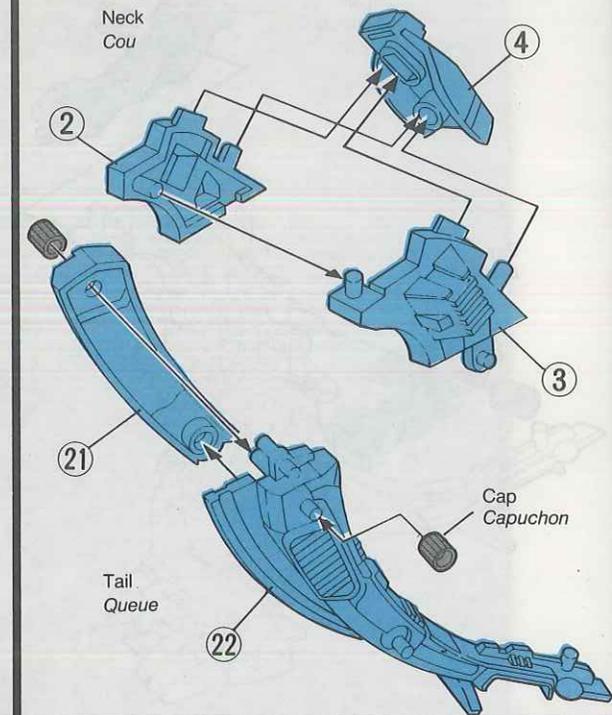


2

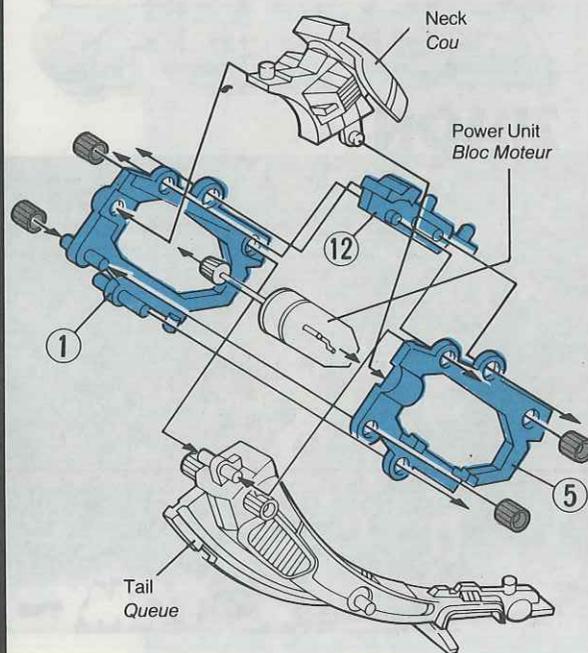


3 Assembly of legs and arms
Montage des jambes et des bras

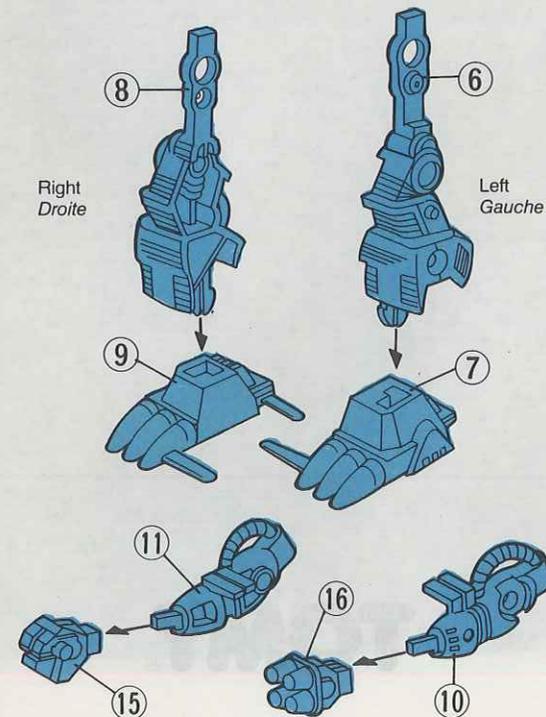

4

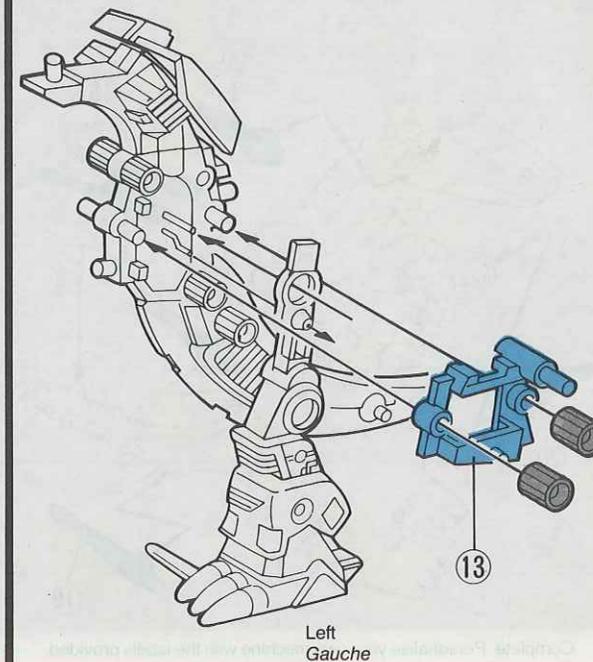


5

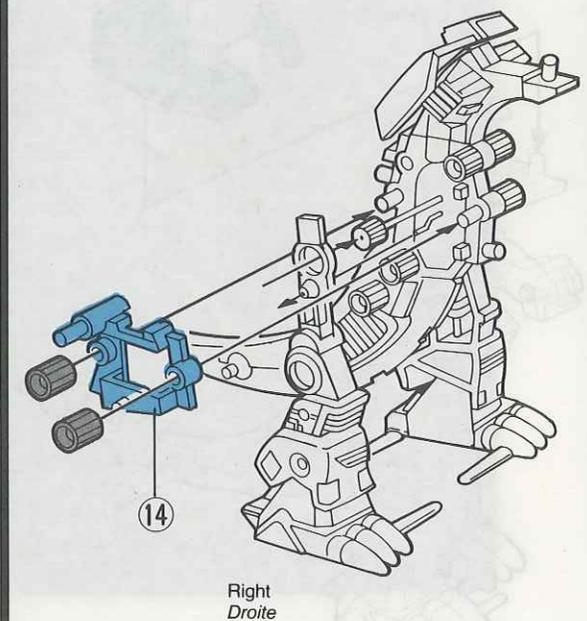


6



Left
Gauche

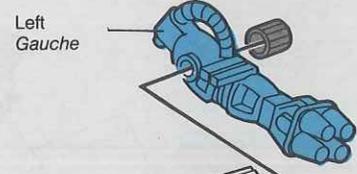


Right
Droite

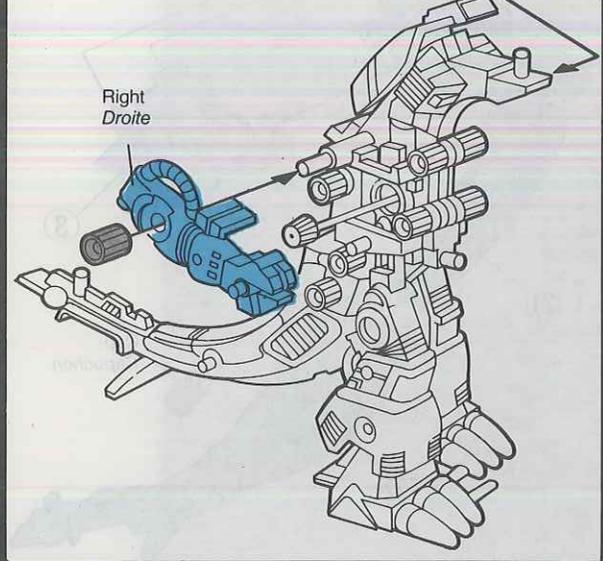

7

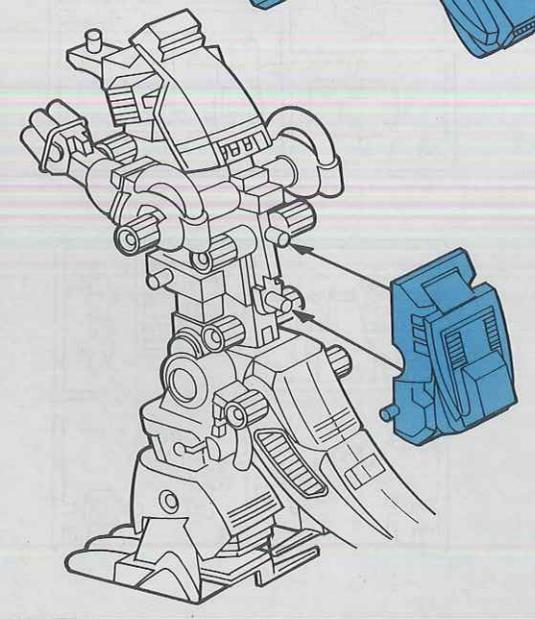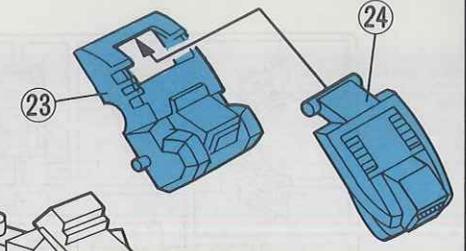


8

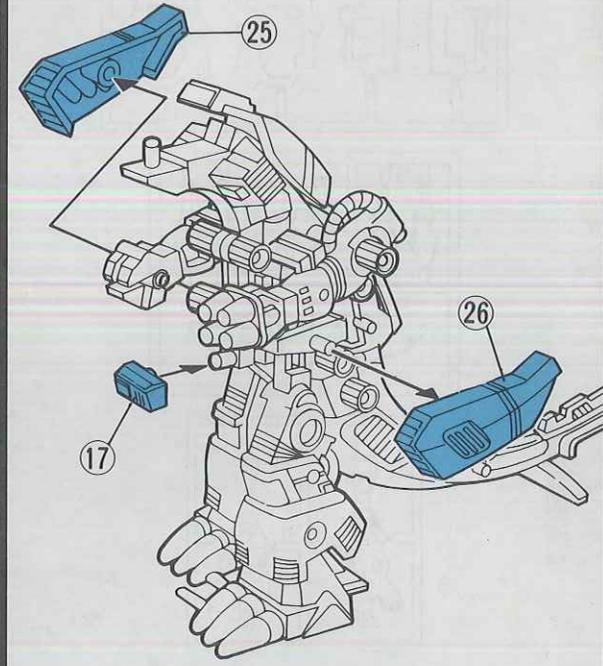



9

Cockpit
Cockpit

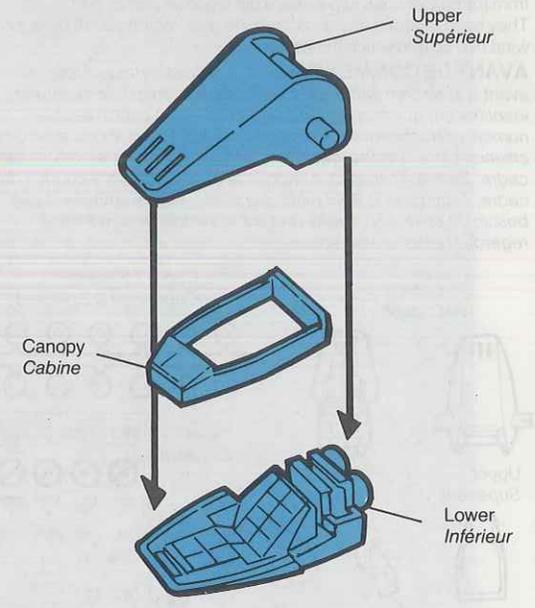


10

Pilot
Pilote

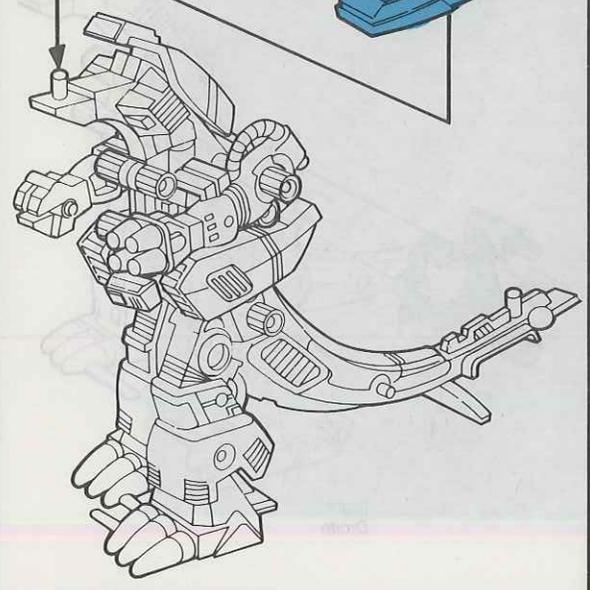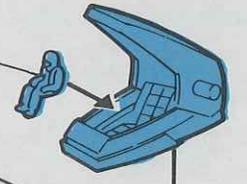

11

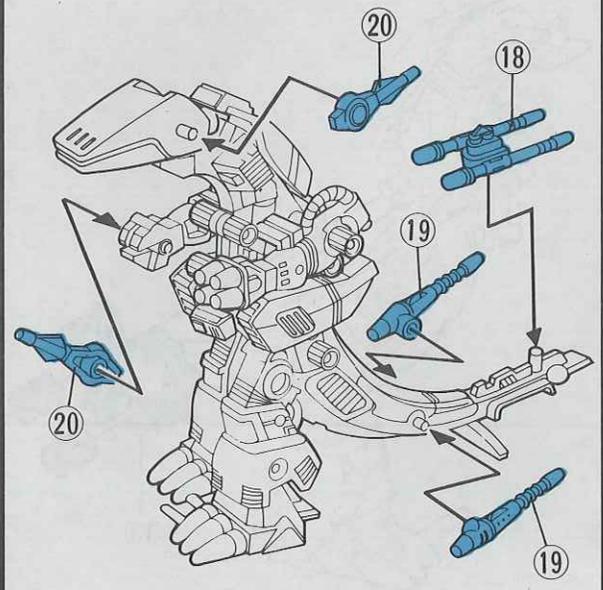


Complete. Personalise your own machine with the labels provided.
Terminé. Personnalisez votre machine à l'aide des étiquettes jointes.

TOMY®

ZOIDS

ZILLON

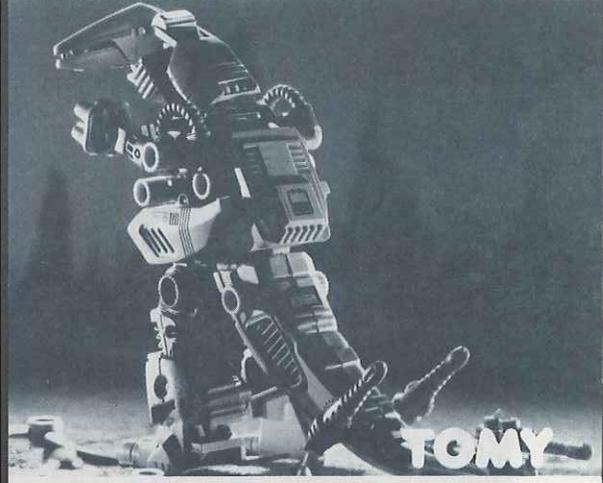

Ref No. 2592